




## B & T PR PLUG

### ASSEMBLY DESCRIPTION

The B & T PR Plug is a positive plug used with B & T R Locks. The B & T PR Plug holds pressure from above and below. When the Prong is pulled, pressure is equalized.

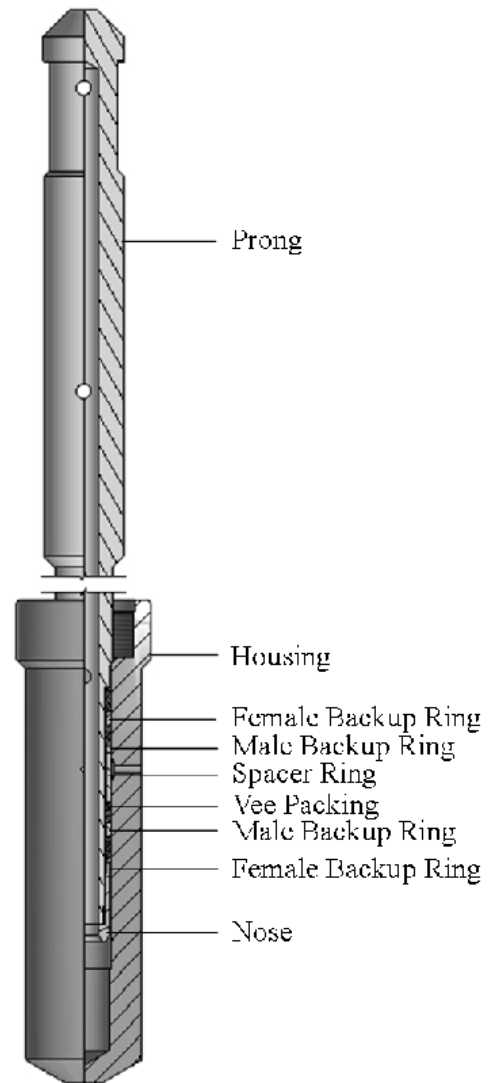



## B & T PR PLUG

SPECIFICATIONS				
	1.710	1.781	1.875	2.125
Fishneck	1.187	1.187	1.187	1.187
No-Go O.D.	1.700	1.770	1.865	2.115
Connections	1-1/8"-16	1-3/8"-14	1-3/8"-14	1-3/8"-14
Running/Pulling Tool	JDCBT-01500-01 SBPT-01500-01	JDCBT-01500-01 SBPT-01500-01	JDCBT-01500-01 SBPT-01500-01	JDCBT-01500-01 SBPT-01500-01

SPECIFICATIONS				
	2.188	2.313	2.562	2.750
Fishneck	1.375	1.375	1.375	1.375
No-Go O.D.	2.175	2.300	2.550	2.740
Connections	1-3/4"-12	1-3/4"-12	2"-12	2-1/2"-12
Running/Pulling Tool	JDCBT-02000-01 SBPT-02000-01	JDCBT-02000-01 SBPT-02000-01	JDCBT-02000-01 SBPT-02000-01	JDCBT-02000-01 SBPT-02000-01

SPECIFICATIONS				
	2.813	2.875	3.437	3.688
Fishneck	1.375	1.375	1.750	1.375
No-Go O.D.	2.803	2.866	3.425	3.670
Connections	2-1/4"-12	2-1/4"-12	2-3/4"-12	3-1/16"-12
Running/Pulling Tool	JDCBT-02000-01 SBPT-02000-01	JDCBT-02000-01 SBPT-02000-01	JDCBT-02500-01 SBPT-02500-01	JDCBT-02000-01 SBPT-02000-01

SPECIFICATIONS				
	3.813	4.125	4.562	
Fishneck	2.313	2.313	2.313	
No-Go O.D.	3.805	4.120	4.550	
Connections	3-1/16"-12	3-1/4"-12	3-3/4"-12	
Running/Pulling Tool	JDCBT-03000-01 SBPT-03000-01	JDCBT-03000-01 SBPT-03000-01	JDCBT-03000-01 SBPT-03000-01	

All Specification Tables contain approximated dimensions and should be used for reference only.