




BOW SPRING CENTRALIZER

ASSEMBLY DESCRIPTION

Through the use of an adjustable nut, the Bow Spring Centralizer can adjust to any O.D. ranging from 1.500" to 7.500" O.D. It is used to keep the tool string located in the center of the tubing.

The Bow Spring Centralizer contracts to fit through 2.313" Landing Nipples.

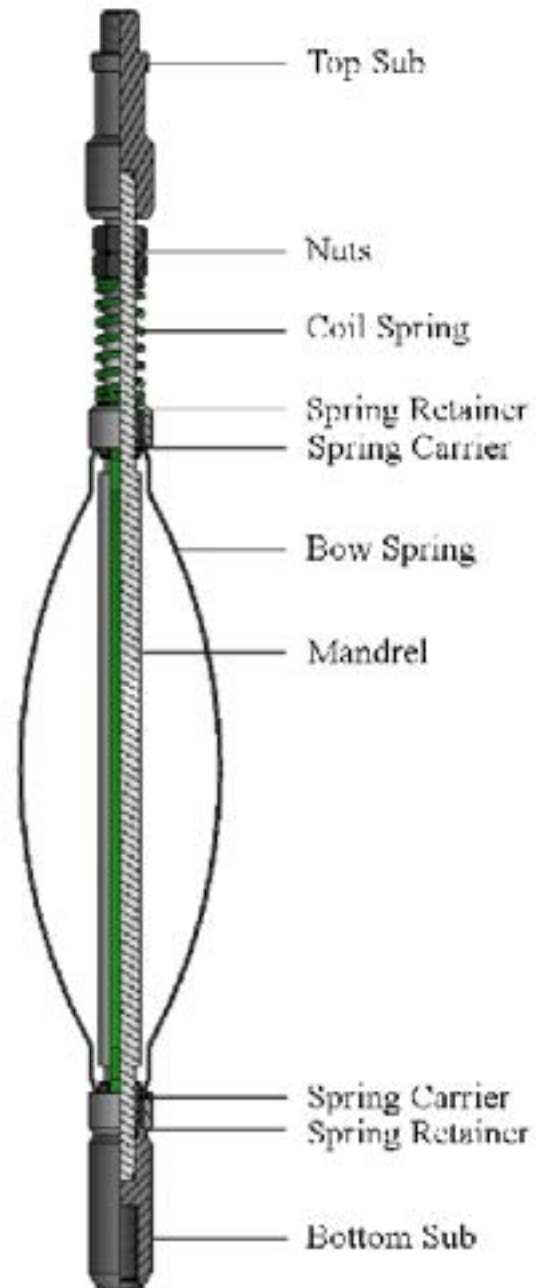



BOW SPRING CENTRALIZER

SPECIFICATIONS	
	Standard
Fishneck	1.375
Connections	15/16"-10

All Specification Tables contain approximated dimensions and should be used for reference only.