




GR ADAPTER

ASSEMBLY DESCRIPTION

The GR Adapter is used in conjunction with the GS Pulling Tool to convert it into a jar up to release type tool.

The shear pin of the GS Pulling Tool must be removed after the GR Adapter is installed in the assembly.

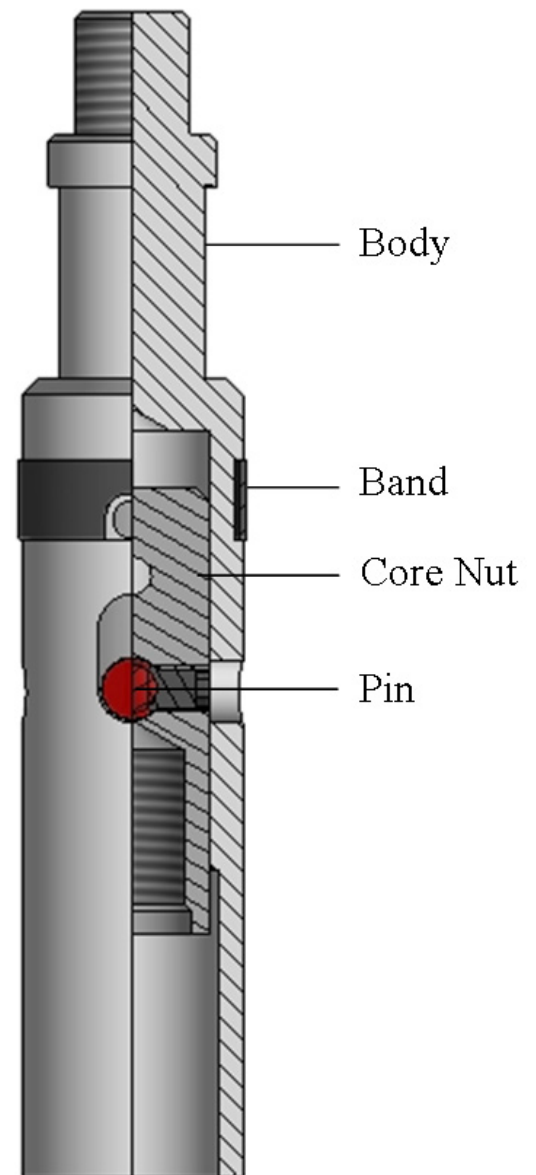



GR ADAPTER

SPECIFICATIONS			
	1.500	2.000	2.500
Fishneck	1.188	1.375	1.375
Maximum O.D.	1.460	1.813	2.125
Connections	15/16"-10	15/16"-10	15/16"-10
Shear Pin	1/4" X 1-5/16"	5/16" X 1-11/16"	5/16" X 2"
Length	8.375	8.375	8.875

SPECIFICATIONS			
	3.000	4.000	5.000
Fishneck	2.313	2.313	3.125
Maximum O.D.	2.725	2.725	4.000
Connections	1-1/16"-10	1-1/16"-10	1-1/16"-10
Shear Pin	3/8" X 2-1/2"	3/8" X 2-1/2"	5/16" X 3-13/16"
Length	9.313	9.313	10.750

All Specification Tables contain approximated dimensions and should be used for reference only.