


## RELEASEABLE OVERSHOT

## ASSEMBLY DESCRIPTION

B & T's Releaseable Overshot is used to retrieve tools that have no fishneck, or if the tool's fishneck is damaged. This assembly has multiple Cores that are able to change the length of the assembly, thus granting varying reaches.

If a device cannot be recovered, jarring the assembly down will shear the releasing pin, thus allowing the B & T Releaseable Overshot to release the targeted assembly.

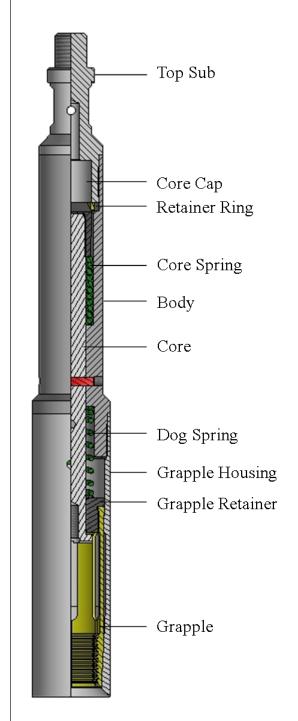



## RELEASEABLE OVERSHOT

Specifications				
	2.000	2.500	3.000	
Fishneck	1.375	1.375	1.750	
Maximum O.D.	1.850	2.250	2.625	
Connections	15/16"-10	15/16"-10	1-1/16"-10	

Specifications				
	3.500	4.000		
Fishneck	2.313	2.313		
Maximum O.D.	3.250	3.800		
Connections	1-1/16"-10	1-9/16"-10		

All Specification Tables contain approximated dimensions and should be used for reference only.