




## B & T RX RUNNING TOOL

### ASSEMBLY DESCRIPTION

The B & T RX Running Tool is used to set B & T R / RN Locks and B & T X / XN Locks in their respective Landing Nipples. The B & T RX Running Tool is able to deploy the locks with their keys maintained in whichever position the operator requires.

The shear pin in the B & T RX Running Tool allows the operator to accurately determine that the lock has been properly set in the top of the Landing Nipple.

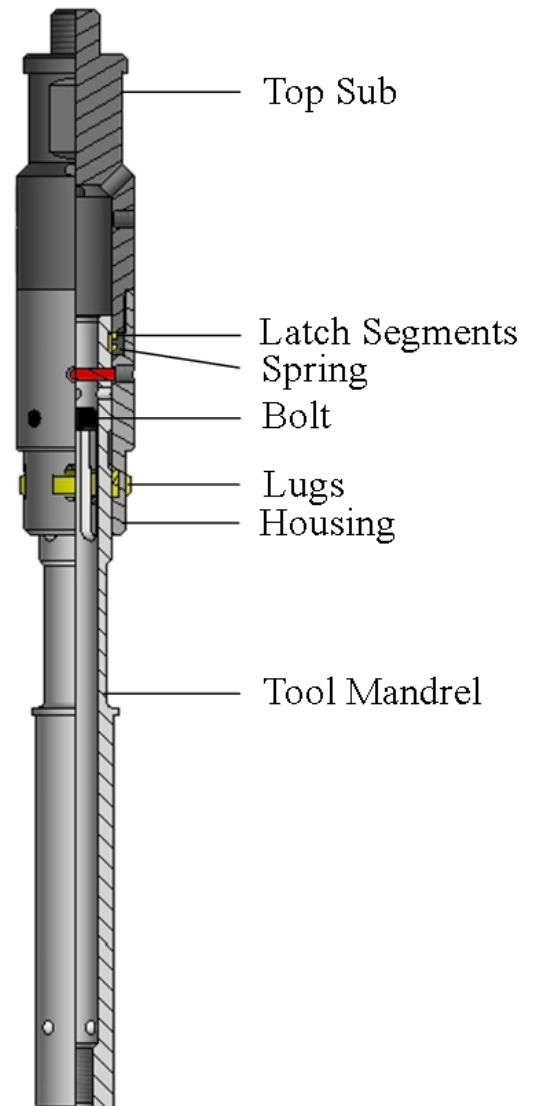



## B & T RX RUNNING TOOL

SPECIFICATIONS				
B & T R / RN Locks				
	2.750	3.688	3.813	4.313
Fishneck	2.313	2.313	2.313	2.313
Pin Connection	1-1/16"-10	1-1/16"-10	1-1/16"-10	1-1/16"-10
Bottom Connection	1-1/4"-12	1-7/8"-12	2-1/8"-12	2-1/8"-12
Length	24.200	24.700	24.700	24.700

SPECIFICATIONS				
B & T X / XN Locks				
	2.875	3.688	3.813	4.000
Fishneck	2.310	3.125	3.125	3.125
Pin Connection	1-1/16"-10	1-1/16"-10	1-1/16"-10	1-1/16"-10
Bottom Connection	1-1/4"-12	1-7/8"-12	1-5/8"-12	1-7/8"-12
Length	24.200	24.700	24.700	24.700

SPECIFICATIONS				
B & T X / XN Locks				
	4.125			
Fishneck	3.125			
Pin Connection	1-1/16"-10			
Bottom Connection	2-1/8"-12			
Length	24.700			

All Specification Tables contain approximated dimensions and should be used for reference only.